

## Baumaße und Hublängen

### SERAC® LH30 A0

Typ	Hub (H)	Länge (L)
SERAC LH30-...-A0-C0-D1	50/100/200	300
SERAC LH30-...-A0-C0-D2		284
SERAC LH30-...-A0-C1-D1		344
SERAC LH30-...-A0-C1-D2		331,5


SERAC® LH30-A0



### SERAC® LH30 A1

Typ	Hub (H)	Länge (L1)
SERAC LH30-050-A1...-E1	50	196,5
SERAC LH30-050-A1...-E0, E2, E4	50	161,5
SERAC LH30-100-A1...-E1	100	246,5
SERAC LH30-100-A1...-E0, E2, E4	100	211,5
SERAC LH30-200-A1...-E1	200	346,5
SERAC LH30-200-A1...-E0, E2, E4	200	311,5

SERAC® LH30-A1



Typ	Hub (H)	Länge (L2)
SERAC LH30-...-A1-C0-D1	50/100/200	300
SERAC LH30-...-A1-C0-D2		284
SERAC LH30-...-A1-C1-D1		344
SERAC LH30-...-A1-C1-D2		331,5

### SERAC® LH50 A0

Typ	Hub (H)	Länge (L)
SERAC LH50-100-A0-C0	100	433
SERAC LH50-100-A0-C1	100	468
SERAC LH50-200-A0-C0	200	433
SERAC LH50-200-A0-C1	200	468


SERAC® LH50-A0



### SERAC® LH50 A1

Typ	Hub (H)	Länge (L)
SERAC LH50-100-A1-C0	100	668,5
SERAC LH50-100-A1-C1	100	706,5
SERAC LH50-200-A1-C0	200	768,5
SERAC LH50-200-A1-C1	200	806,5

SERAC® LH50-A1

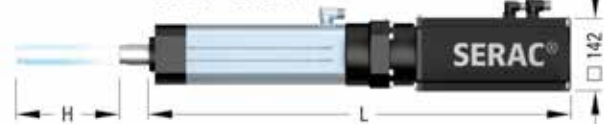

### SERAC® LH100 A0

Typ	Hub (H)	Länge (L)
SERAC LH100-100-A0-C0	100	489
SERAC LH100-100-A0-C1	100	550
SERAC LH100-200-A0-C0	200	489
SERAC LH100-200-A0-C1	200	550

SERAC® LH100-A0



### SERAC® LH100 A1

Typ	Hub (H)	Länge (L)
SERAC LH100-100-A1-C0	100	748
SERAC LH100-100-A1-C1	100	809
SERAC LH100-200-A1-C0	200	848
SERAC LH100-200-A1-C1	200	909

SERAC® LH100-A1



alle Maße in mm